

Instructions

Infrared Remote Control LED Dimmer

PE 388A/PE388D



Using this product, please read this instructions carefully.

Model No: PE388A PE388D

Input Voltage: 90-265V

Control mode: Knob controls/Infrared

Remote distance: >8 meters

Dimensions:LxW(mm): 86x86mm

Packing:LxWxH(mm): 100x90x62mm

Dimming signal output:

⊙ PE388A ⊙ PE388D


5V PWM
1-10V
0-10V

DMX512
5V PWM
1-10V
0-10V

Output interface Description:

5V PWM: Directly to the controller, high level, drive current<10mA
1-10V: Put into the current<100mA
0-10V: Output<20mA
DMX512+:
DMX512-: DMX512signal output,1-512address to send all
GND: Common ground

 Dimming panel:

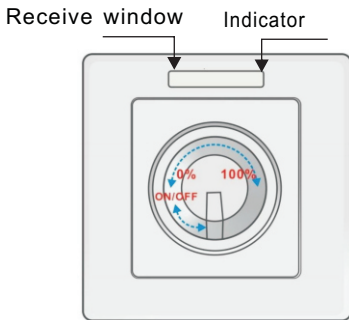

Turn left knob: reduce the brightness
Turn right knob: increase the brightness
Press the knob: turn on/turn off

Indicator:

 
- Power indicator light.
- After power indicator extermineate.
- Dimming light flashing rapidly.

Indicator lights when the president to minimum or maximum bit, indicates to minimum or maximum.


Function Description:

- 0~100% brightness adjustment.
- knob stepless dimming+wireless remote control dimmer, convenien and practicalt I
- 512dimming adjust the lighting dedicate and soft and stable, flicker-free
- 25%、50%、75%、100%4 kind of brightness quick selection
- Four kind of DIY scene mode, switch fluorescent indicator and many use-friendly design
- Shutdown brightness memory function.
- Delay off feature

Wiring Diagram

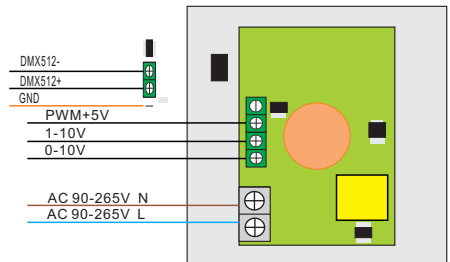

Remote control Description :

 

⏻ bottom to turn on/ off
Delay OFF Key 30 minutes off
+ key increase brightness

- key reduce brightness

100% of the keys to quickly switch the brightness to 100%

75% of the keys to quickly switch the brightness to 75%

50% of the key to quickly switch the brightness to 50%

25% of the key to quickly switch the brightness to 25%

1 key scene key

2 key scene key

3 key scene key

4 key scene key

Custom key scene brightness:

Click the small day scenario key for 3 seconds, you can

adjust the brightness of a corresponding scene button.

 
Hold a key scene more than 3 seconds, the indicator light

long.


Remember the current brightness of the keys to the corresponding

scene.

Remote control size chart:

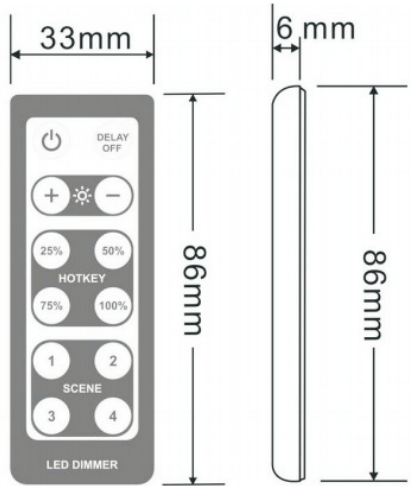

Panel size chart:

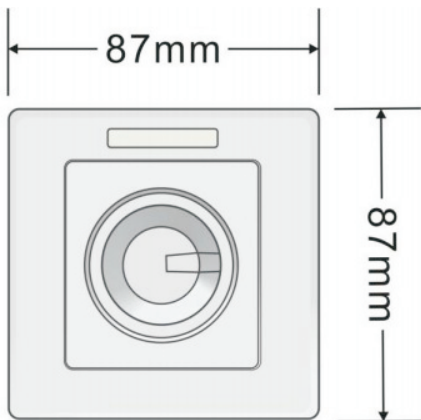 

Product assembly drawing:

